



MOCCAMASTER

the coffeemaker makers.

Important recommendations

Before using the new coffeemaker for the first time, we recommend to rinse the inside elements and ducts. Fill the machine with cold water and operate it once or twice without any coffee. Place the machine horizontally in a frost-free room. If the room is not frost-free, remove remaining water from the machine. Remove all loose parts and hold the machine upside down over the sink.

Prior to this operation the machine should be disconnected from the mains.

If the machine will not be used for some time, it is recommended to run it once through with water only before making coffee. This will prevent any stale flavour.

Setting of the filterholder:

- for preparing 6-10 cups
- for preparing 2-5 cup
- if you want coffee before the brewing is completely finished

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled on or tripping over a longer cord.
- b) Extension cords may be used if care is exercised in their use
- c) If an extension cord is used,
 - 1) the marked electrical rating of the extension cord should be at least as great as the rating of the appliance
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

Descaling

Your coffeemaker will need regular descaling, depending on the hardness of the water in your area and the frequency with which the coffeemaker is used.

Instructions:

Once the vertical and transparent spyglass in the middle of the reservoir has lost its transparency because of scale, cleaning should be done. If descaling is not carried out regularly, the deposits of scale will cause overheating of the boilingelement and the machine will be switched off automatically.


To descale the machine, proceed as follows:

1. Fill reservoir with 1 litre of cold vinegar or another good descaler. Place empty filterholder on the filterbracket and the thermojug in the right place. Then switch machine on.
2. The coffeemaker will determine the descaling speed independently.
3. After descaling, use the machine twice more with one litre of clean cold water to remove the vinegar residues in order to prevent a bad flavour in the coffee. If the machine does not operate well after descaling, the level of scale may be so high that the procedure need be repeated.
Do not use a descaling agent more than once.

Important:

This coffeemaker is equipped with a special lead with plug, which in case of damage should be replaced by a similar lead with plug to be obtained from your distributor or Technivorm.

Instructions for use

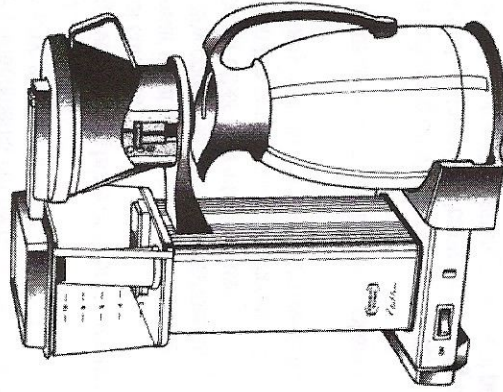

**Coffeemaker KBT-741 Thermo
KBTS-741 Thermo**

"Household Use Only"